

Fabric Graphic Frame: Set-up Instructions

CORNER ASSEMBLY

Start by connecting all corners of the frame. Make sure the lock is loose and slide the two profiles together. Then tighten the lock with the allen wrench. Connect one corner at a time. See images below for further instructions.



Loosen this lock prior to connecting the two profiles together.




Connect profiles together and tighten lock. Image above shows a good connection.



Image above shows a bad connection. If the corners are not lined up properly it will cause problems.

SPLICE CONNECTION ASSEMBLY

Loosen both locks to start. Then slide the two profiles together. Once the two profiles are together tighten both locks with the allen wrench.

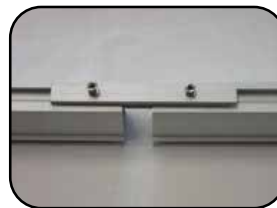

SUPPORT PROFILE ASSEMBLY

Loosen both locks on the support profile. Insert profile into the interior groove on the frame. Once in place Tighten both locks with allen wrench. If your frame has a splice it is best to insert the support profile in the center of the splice as shown below. If it does not have a splice install the support profile in the center of the frame.



Fabric Graphic Insert: Installation Instructions

IMPORTANT! BEFORE YOU START: Clean your hands thoroughly to prevent contamination of the fabric insert. *Use of latex gloves is recommended.*



STEP 1

Working on a flat, clean surface unpack graphic insert and unfold.

Note: Inserts have a gasket sewn onto the back side edge as shown.

STEP 2

Install fabric front side in one corner as shown below.



STEP 3

Repeat the process in the diagonally opposite corner.



STEP 4

Finish installing the remaining corners as shown below.



STEP 5

Starting at the midpoint of each side of the frame, tuck in the fabric going out to each corner to ensure a smooth finished look. Make sure entire gasket is **completely inserted** into the frame groove.

Fabric Graphic Insert: Removal Instructions

The fabric graphic consists of two components: the light weight aluminum frame and the printed fabric graphic. The graphic is designed to be easily removed for cleaning or to be replaced. See below for important removal instructions.

TO REMOVE GRAPHIC INSERT FROM FRAME

1. Use a small flat head screw driver for easy, damage-free removal of fabric graphic insert from groove of frame.



2. Insert into any corner of the frame to use to push gasket edging out of the frame.



3. Screw driver in corner, ready to pry gasket loose.



4. Pry the gasket from the corner to release from frame groove.



5. Gasket free from frame groove in corner.



6. Pull loose with fingers to fully remove insert from frame.

